



### 更换胶体



① 拆下盖板

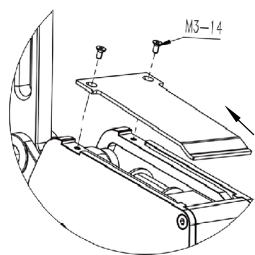

② 取出螺丝

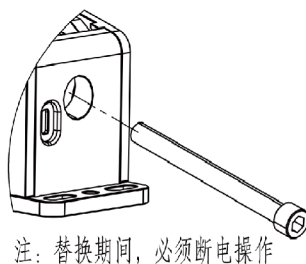

③ 更换胶体

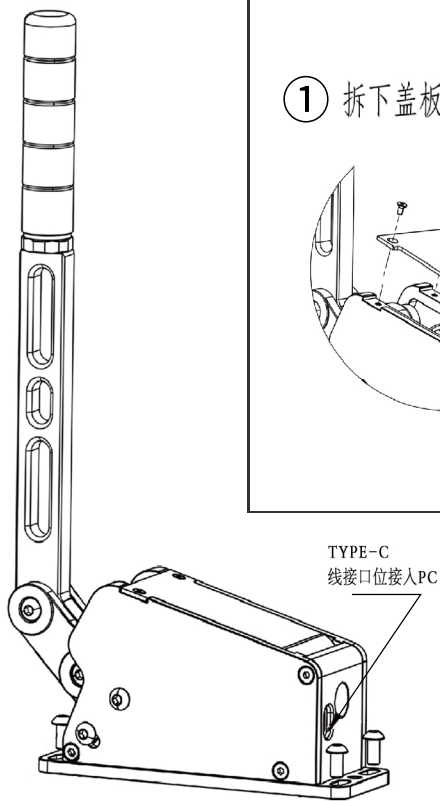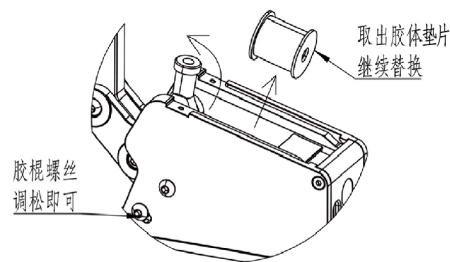


A. 圆头螺丝 M6-14 X4

B. 型材螺母 M6-40 X4


### 转换手刹方向

① 拆下手柄

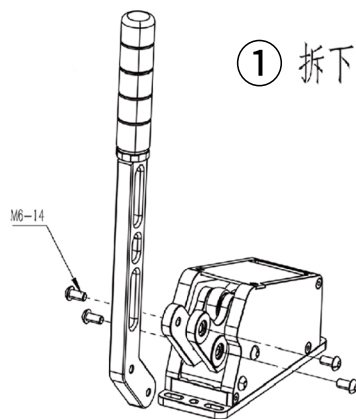


② 调整安装

拆下螺丝M6-14  
调整手柄方向  
重锁螺丝

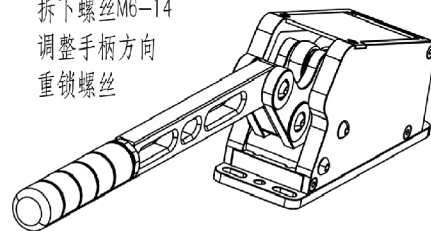


### 微调拉杆

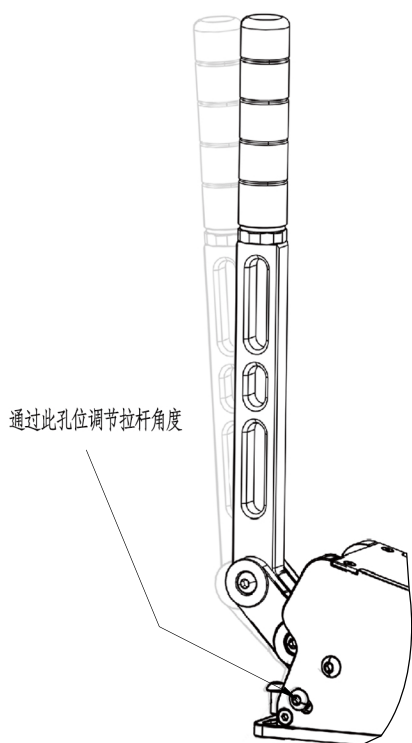


### 安装与固定

注：此L板可额外购买

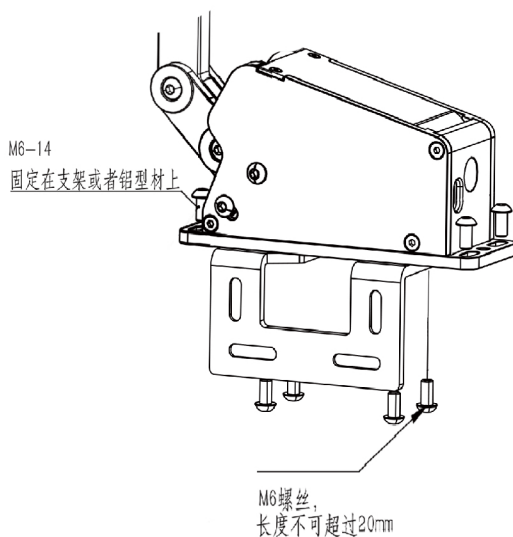


底板

此孔为M6  
的螺纹孔  
长度不可  
超过20mm

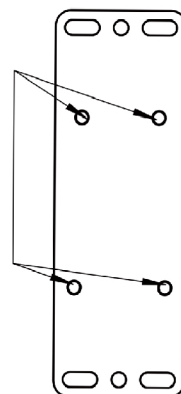


## Rubber Replacement

① Remove the front plate

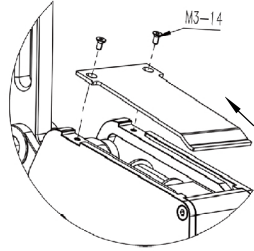


② Remove the bolt

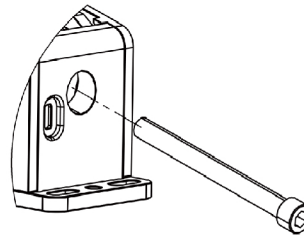


Note:  
Make sure the power is OFF during the replacement

③ Swap the rubber

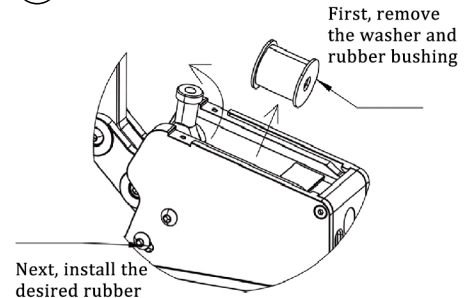


Next, install the desired rubber bushing to adjust the resistance of the Handbrake

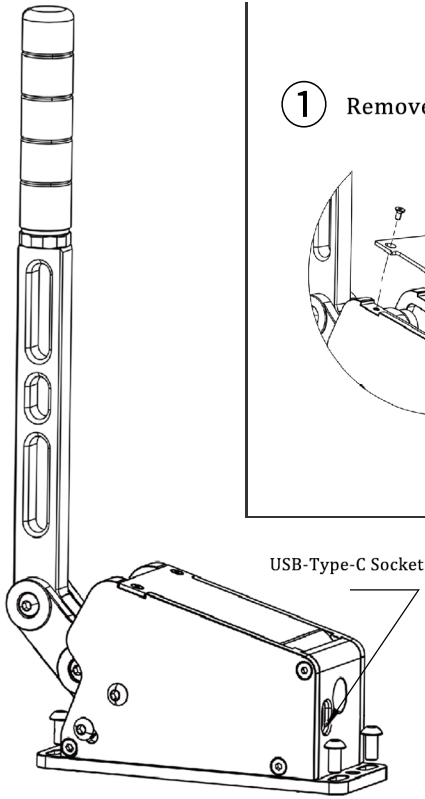

USB-Type-C Socket


## Switching lever position

① Remove the lever

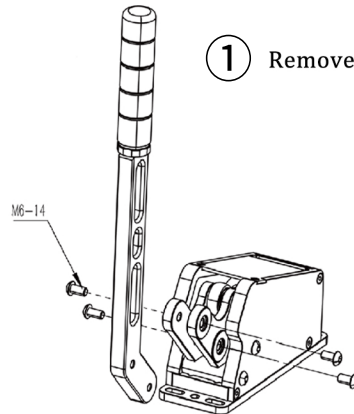

② Flip the lever

Remove the M6-14 bolts, flip the position of the lever, then re-insert the bolts and tighten.

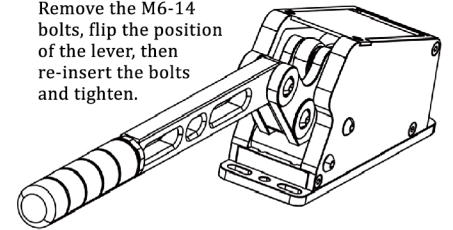


A . Button Head Socket Cap Screw M6-14 X4



B . Roll in T-Nut with Ball Spring M6-40 X4

## Adjust the lever


Fine-tune the angle of the lever

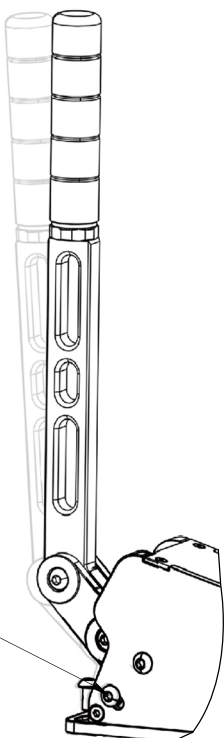

## Mount and Install

\* Note:  
The L-shaped mounting plate can be purchased separately \*

The handbrake can be mounted using M6-14 bolts

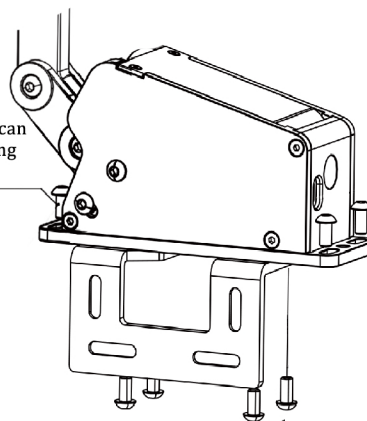

M6 Bolts only (Maximum length is 20mm)

Bottom View

